

FLUANCE®

Stylus Replacement Instructions
ATN91


IMPORTANT!

Avoid touching the tip of the Stylus itself when replacing.


For additional assistance, please visit:
www.fluance.com

Removing the Stylus


1. Remove the Headshell

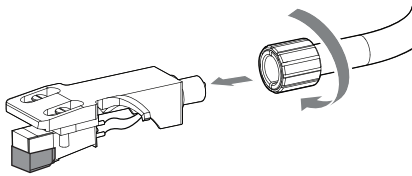

2. Remove the Stylus protector

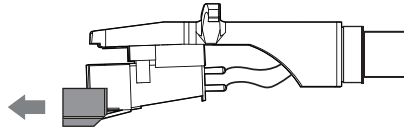


3. Pull down on the front of the Stylus

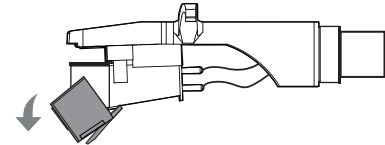


Installing the new Stylus

1. Insert the new Stylus and press up on the front to install

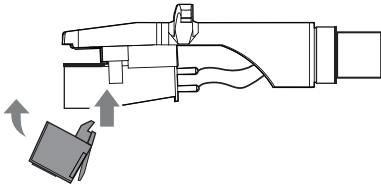

2. Install the Stylus protector

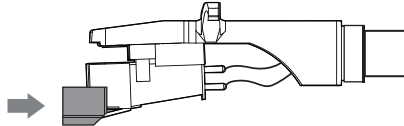

3. Install the Headshell

