

FLUANCE®

Audio Device Compatibility Guide
AB40

Audio Output Guide

The AB40 does not support Dolby Digital Audio. If you are experiencing Optical Input issues you may need to change the audio output settings on your source device.

These instructions will help you disable Dolby Digital on common devices.

The AB40 supports PCM audio but different devices refer to this format differently. For instructions on a specific device please consult the device's user manual.

Note: The audio output format may need to be changed on the TV and also on the source device.

Devices

- TV/Cable Box/Satellite Box
- Apple TV
- Playstation 4
- Xbox One

TV/Cable Box/Satellite Box

Locate Audio Output Settings and ensure Dolby Digital is turned off. This setting is sometimes referred to as PCM.


Some TVs also require that audio output be enabled. This setting may be referred to as External Speakers. Ensure this is selected as your speaker/audio output.

Apple TV

Go to Settings and Select Audio and Video




Set Dolby Digital to Off

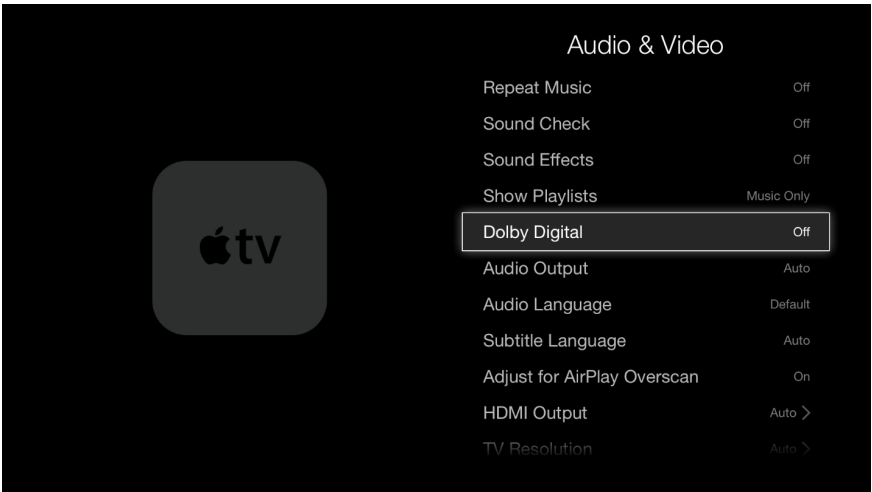


PlayStation 4

Go to Settings

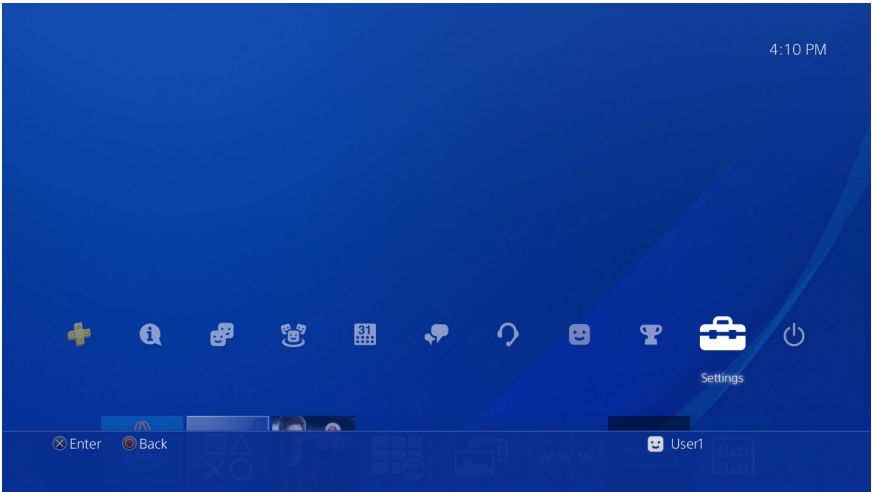


Select Sound and Screen

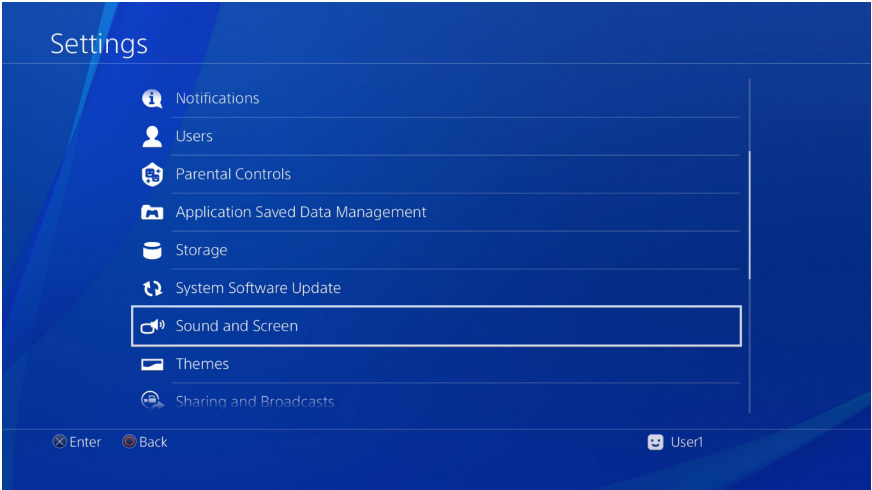


Select Audio Output Settings



Select Audio Format (Priority)

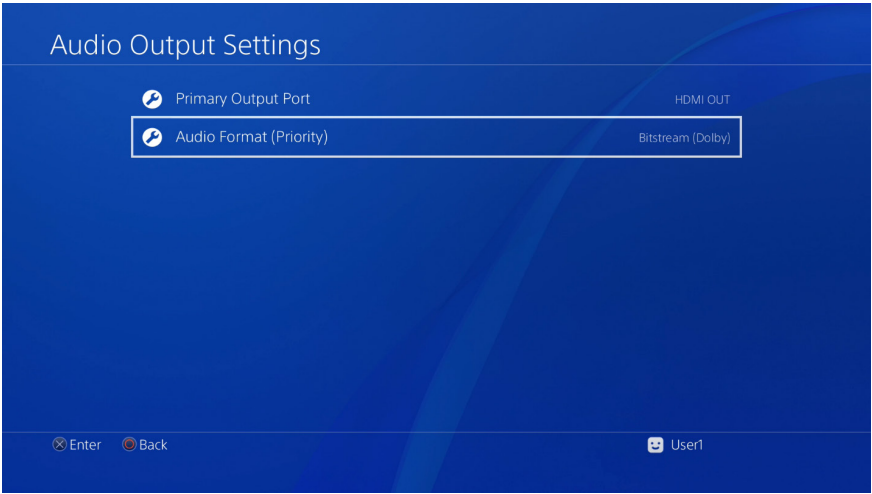


Select Linear PCM

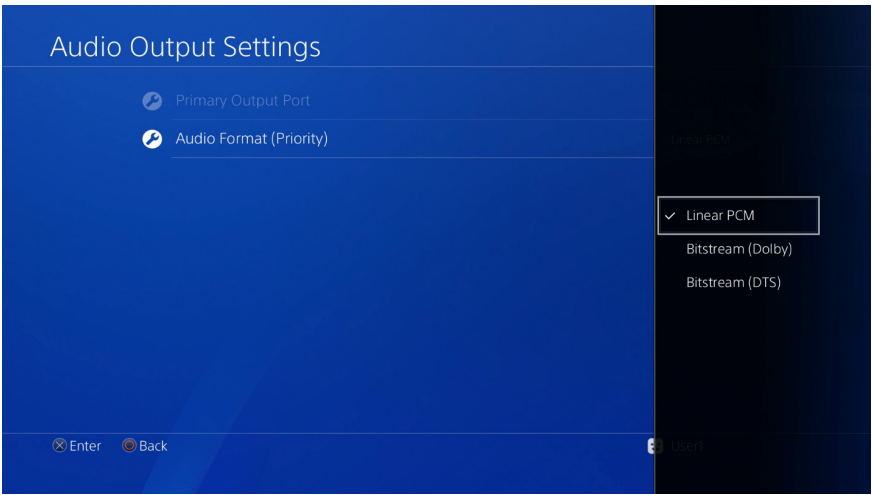


Xbox One


Go to Settings

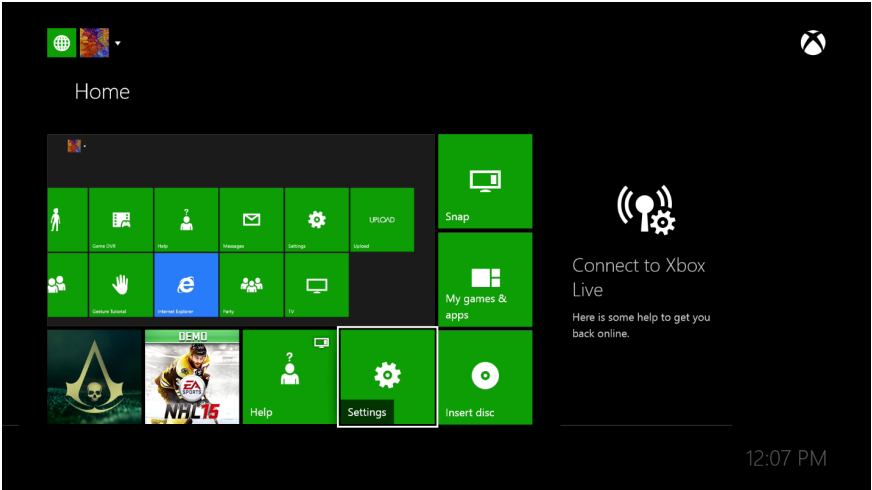

Select Display & sound

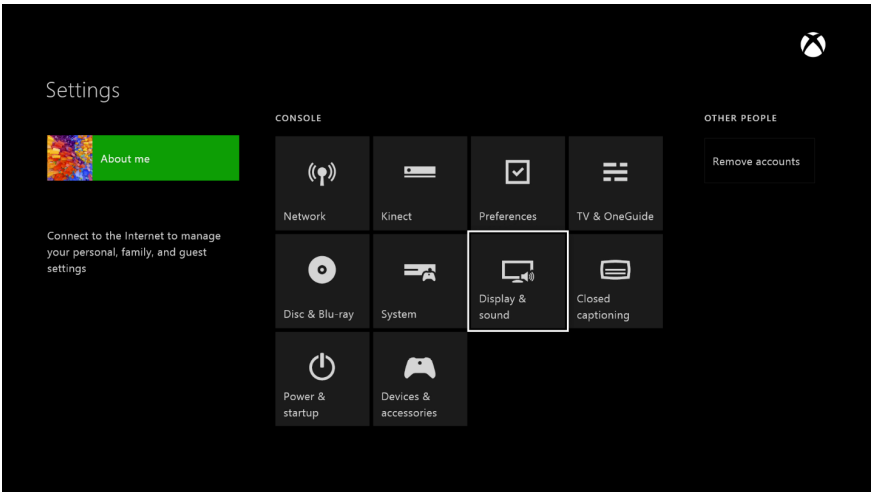

Select HDMI audio or Optical audio

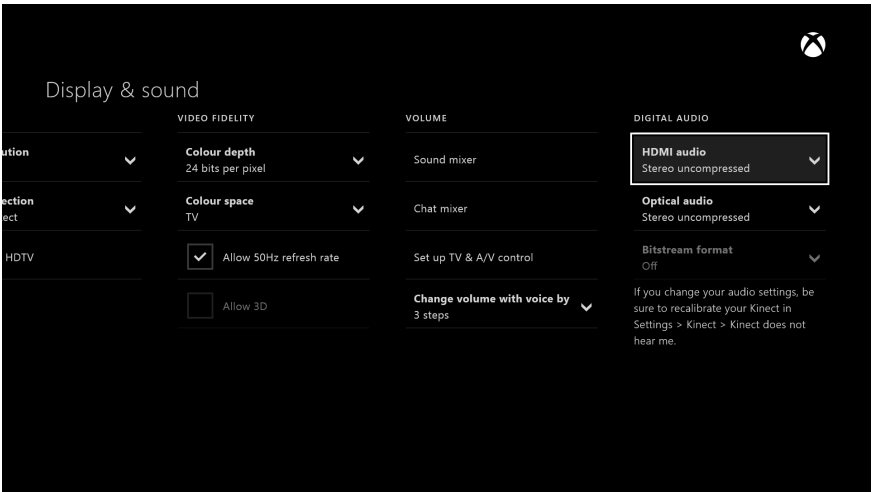

Ensure set to Stereo uncompressed

